


Assembly of a sample clear-view protective screen for CNC machines

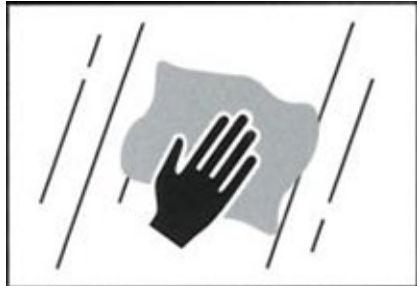

- 1** Carefully clean the machine protective screen of any dirt and dust. Please use the enclosed microfiber cloth for the final cleaning. The protective screen must be dry. The clear protective pane fits onto the machine protective pane almost by itself without any special skill and with absolutely no bubbles. Bubbles only form when dirt, dust and air are trapped..



- 2** The adhesive side is equipped with a protective film, which is 2mm larger in diameter than the clear protective screen. Remove the film and now attach the clear protective screen to the desired position. Make sure not to touch the adhesive side.